## **INSTRUCTIONS**


## LT-SH-13-PEN459 (all finishes)

Bulb Fitting: E27 X 4 Max. 40W, 220-240V~50Hz

## IMPORTANT! Please read these instructions fully before attempting to fit this product.

WARNING: ENSURE THE ELECTRICAL SUPPLY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF COMPLETELY; EITHER BY REMOVING THE FUSE OR TURNING OFF THE CIRCUIT BREAKER. TURNING THE POWER OFF USING THE LIGHT SWITCH IS INSUFFICIENT PROTECTION AGAINST ELECTRIC SHOCK.

NOTE: These important safeguards and instructions are not meant to cover all possible conditions or situations that may occur. It must be understood that common sense, caution, and care, are factors that must be supplied by the person(s) installing this product.

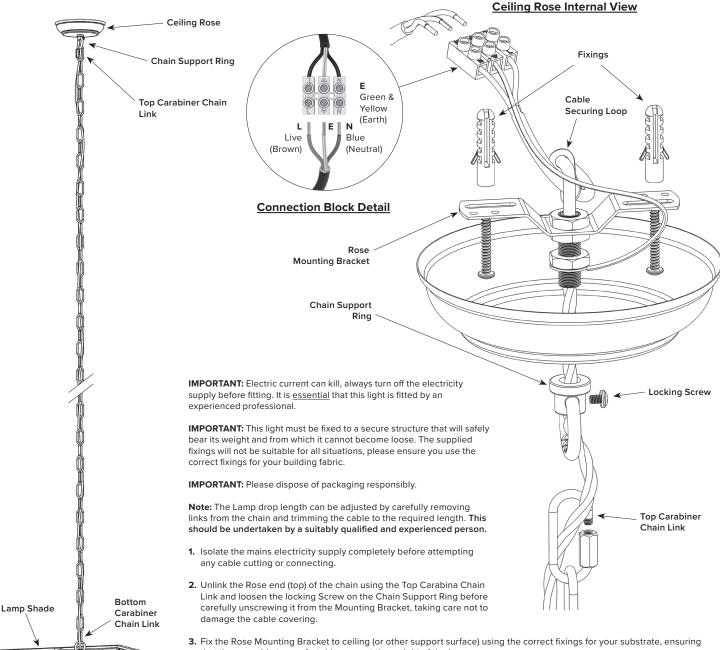

- that they are able to comfortably support the weight of the lamp.
- 4. If necessary, cut the chain to your desired drop length and re-fit using the Carabiner Chain Link.
- 5. Carefully trim any excess lamp cable inside the Rose, leaving enough slack to weave cable through chain, missing three chain links each time, and also leaving enough to comfortably re-fit the Connector Block, making sure that you can correctly locate the LIVE, EARTH & NEUTRAL after they have been cut.
- 6. Re-feed cable through the chain, missing three links every time, and replace the Cable Securing Loop inside the Rose to ensure that the cable is held sufficiently.
- 7. While supporting the lamp, connect the Connection Block to mains elctrical supply cable and re-fit the Rose to the Rose Mounting Bracket using the Chain Support Ring. Re-tighten the Locking Screw on the Chain support Ring.
- 8. Carefully fit four E27 Light Bulbs from the bottom of the Lamp Shade.

Additional information can be found at soholighting.com or on request via email: info@soholighting.com

